


1099

New Hand Sanitizer Dispenser

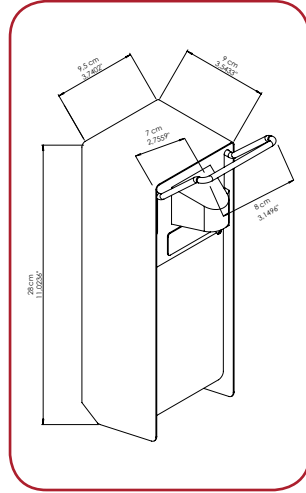

1099

GENERAL DESCRIPTION

- + Liquid hand sanitizer dispenser 1000 ml capacity, is made with matte-silver aluminium cover.
- + Elbow pressing pump made with 304 s.s.
- + Wall mounted
- + Available only in matte finish
- + Useful for the public areas
- + It is recommended use only for soap and hand sanitizing liquids.
- + It doesn't support that contains chlorine or solid abrasive particles.
- + It is mounted with four steel 4 mm screws (provided in the box) with their 8 mm plastic plugs (also provided).
- + Inner plastic tank is made with polyethylene. The tap on the tank helps to refill easily.

COMPONENTS AND MATERIAL


- + 1099 Matte- Silver aluminium

DOSAGE VOLUME OF THE PUMPS

- + Soap Pump: 1.5 ml per drop.
- + Foam Pump: 0.45 ml per drop.
- + Spray Pump: 0.4 ml per drop.

INSTALLATION

- + First measure out where the liquid dispenser will be placed, mark four holes and drill into the wall

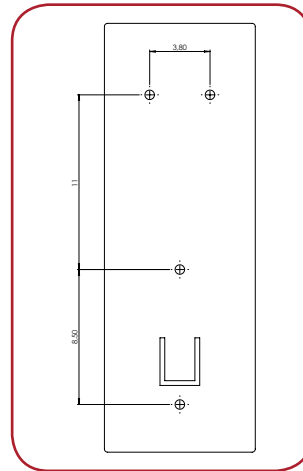

- + Insert the provided wall plugs and screw in the top two screws, leaving a slight gap for the dispenser to slot onto.
- + Remove the liquid container before mounting the dispenser to the wall.
- + Slot the dispenser onto the two previously fixed screws and then screw final two screws.
- + Once the dispenser is secure, insert the liquid container back into the dispenser.

FILLING THE TANK

1. Unscrew the cap at the top and fill the tank avoiding spilling outside. Replace the cap and close the cover.
2. The dispenser works automatically at each detection of hands under dispenser sensor.

ATTENTION

On first time use or after not using it for a long time, it is likely to find air inside the pump. We suggest to activate sensor several times to make air come out.

MOUNTING TEMPLATE

Should be minimum 100 cm high from the floor.

DISPENSER REPLACEMENT REQUIREMENTS AND RECOMMENDATIONS

The following recommendations are intended to provide guidelines on the best possible placement of the dispensers. Because every location a dispenser is to be mounted is different, depending on customer site, physical size limitations, and available space, these recommendations may not always be entirely possible to follow. However, when placing a dispenser installation must meet ADA requirements and should promote ease of use and be in union with its surroundings. Upon installation, the dispenser should be level and the job results professional, presentable and fully functional.

AFTERCARE INSTRUCTIONS

- + Regular cleaning with a soft cloth will keep the surface of your product looking new. Soapy water can be used to remove stubborn marks. Don't use abrasive or chemical cleaners as these may damage the surface finish over time.
- + Don't expose to sunlight.
- + Don't respond to the product with force against the possibility of damage, deformation.
- + Don't throw any cigarettes and flammable materials into the product.



PRODUCT CODE
1099



LITER
1 L



PRODUCT DIM.
9,5x9x28,5 cm



CARTON DIM. WEIGHT
61x56x38, 16,5 kg



INBOX QUANTITY
20



PALLET QUANTITY
240



GROSS PALLET DIMENSIONS, WEIGHT
80x120x190 cm, 215 kg

